



# Samsung TFT Color YP-T7J The Screen Replacement

This guide will display how to replace the screen of your MP3 player.

Written By: Jason Farr





## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



## PARTS:

- [New 1.2" TFT Color LCD Screen](#) (1)

## Step 1 — The Back Cover



- Remove the 2 screws on the back cover using a Phillips head #0 screwdriver.

## Step 2



- Remove the screw on each side of the device using a Phillips head screwdriver.




## Step 3





- Using the plastic opening kit, place the prying end of the kit into the opening created by removing the screws.
- Gently pry open the back cover. Insert the plastic opening tool in between the cover joints.

## Step 4 — The Battery

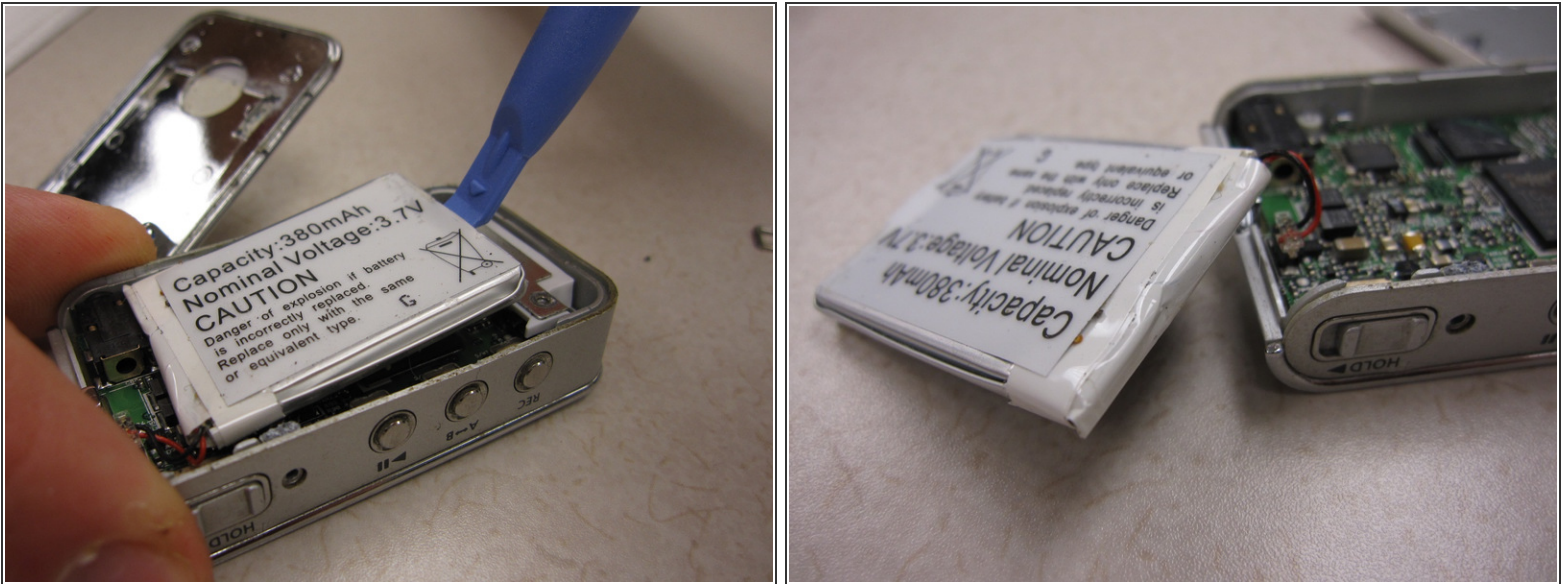

- Once the back cover has been removed the battery will be visible.
  - Pry the battery from the device.
- ⓘ NOTE: The battery should still be connected to the device


## Step 5

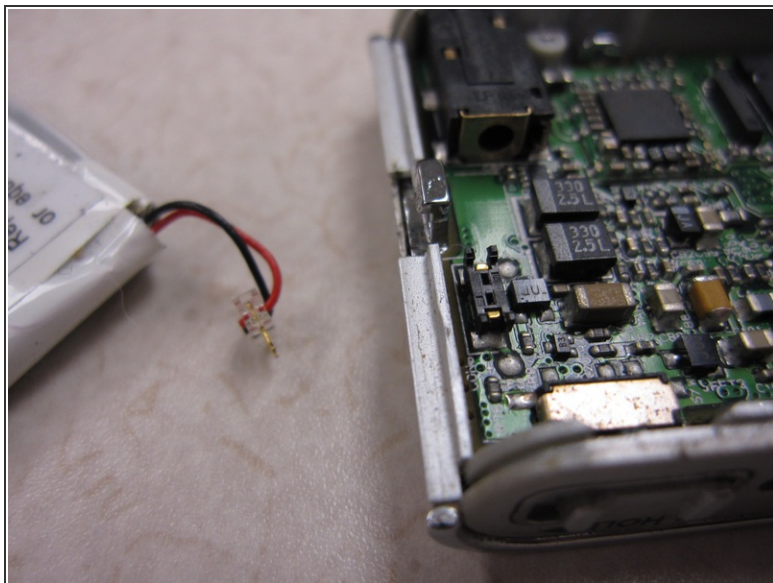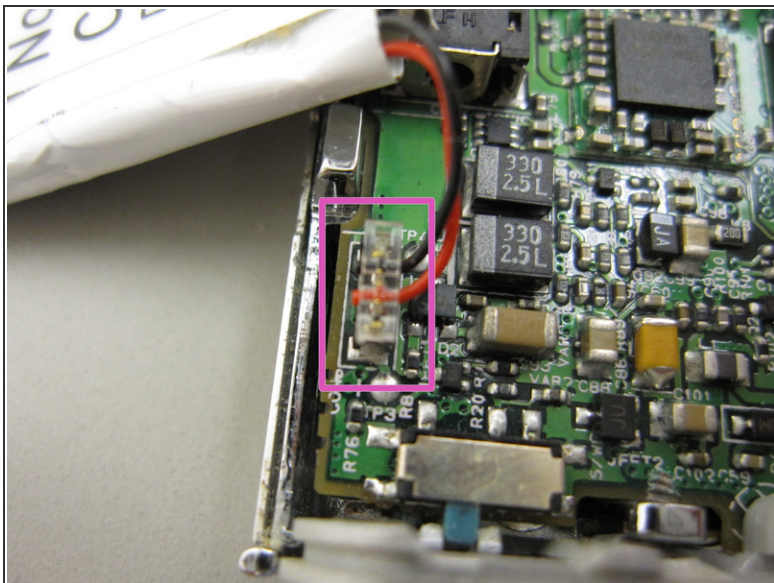

- Unplug the battery connecting cables.

ⓘ NOTE: The battery now should be free from all connections to the device.


## Step 6 — USB Connector Dock

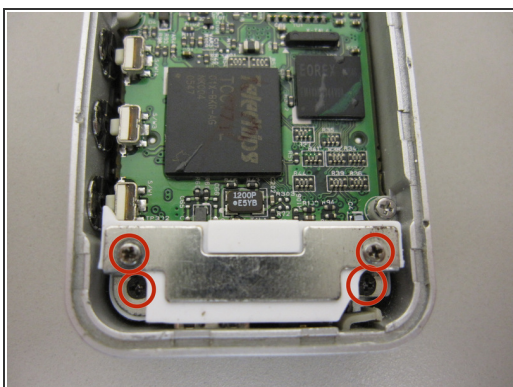

- Once the battery has been removed you can see the motherboard.
- Unscrew 4 screws on the metal dock using a Phillips head screw driver.
- The USB connector can now be taken off of the device.



## Step 7 — The Front Cover

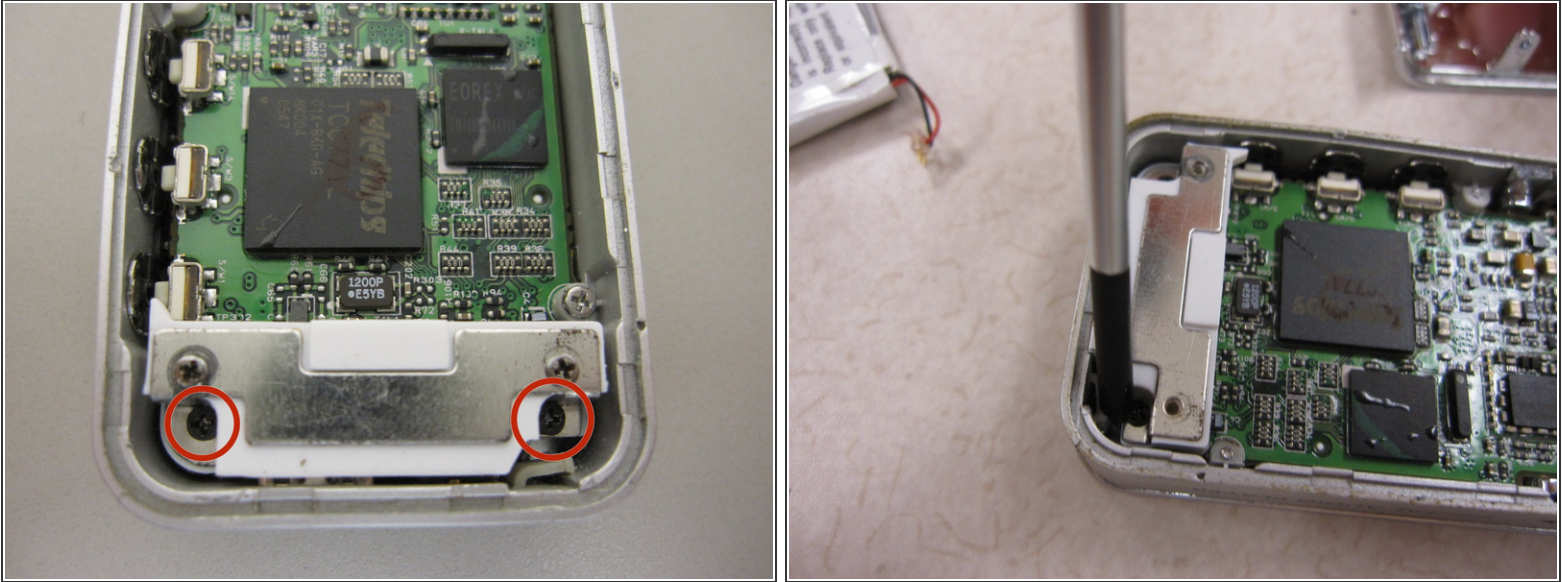


- Using the philips screwdriver, remove the two screws on the mother board.

## Step 8




- Place the pry tool in-between the front cover and mother board.
- Gently separate the front cover.

## Step 9

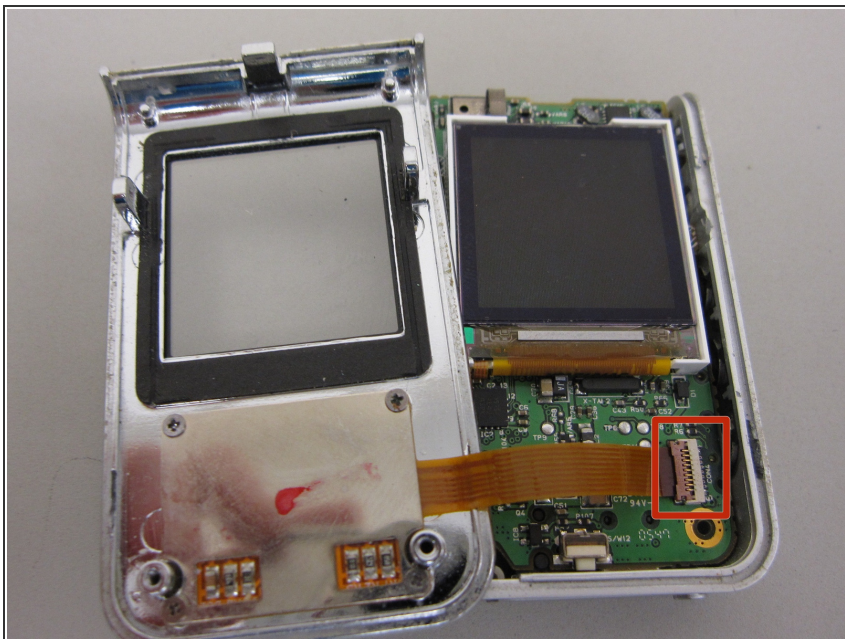

- After opening the front cover you will see and electric ribbon connecting the buttons to the mother board.

## Step 10

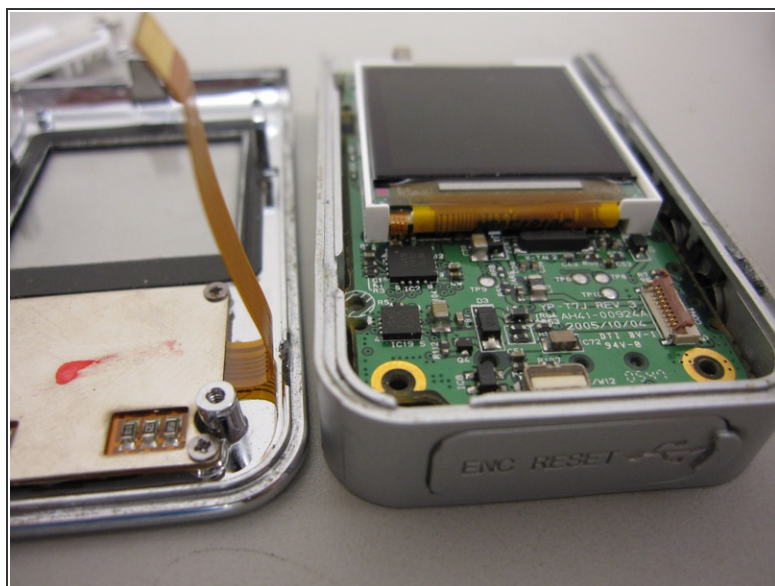


**⚠ CAUTION:** Do not rip the electric ribbon from the mother board.

- Carefully flip up the plastic lip that holds the electric ribbon to the board.




## Step 11 — The Screen

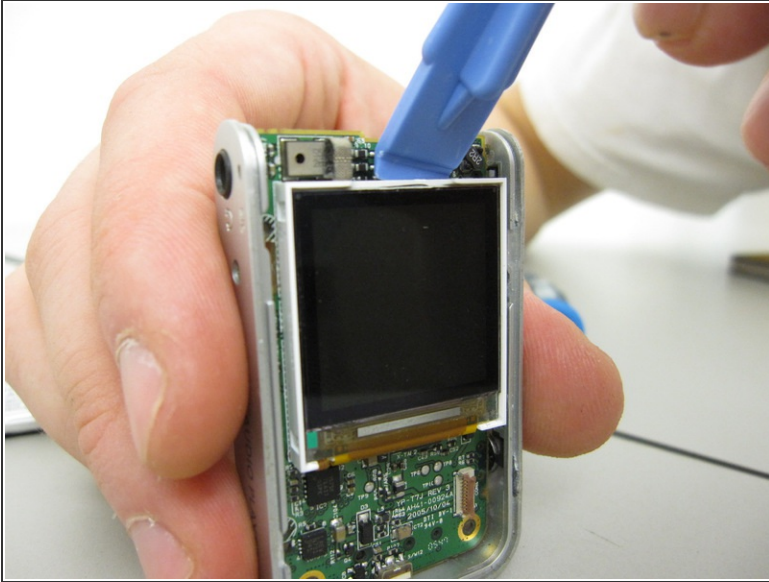

- Place the pry tool between the plastic housing around the LCD screen, and the mother board.
- Gently separate the screen housing from the mother board
- **CAUTION:** The screen is still attached to the mother board via another electric ribbon.



## Step 12

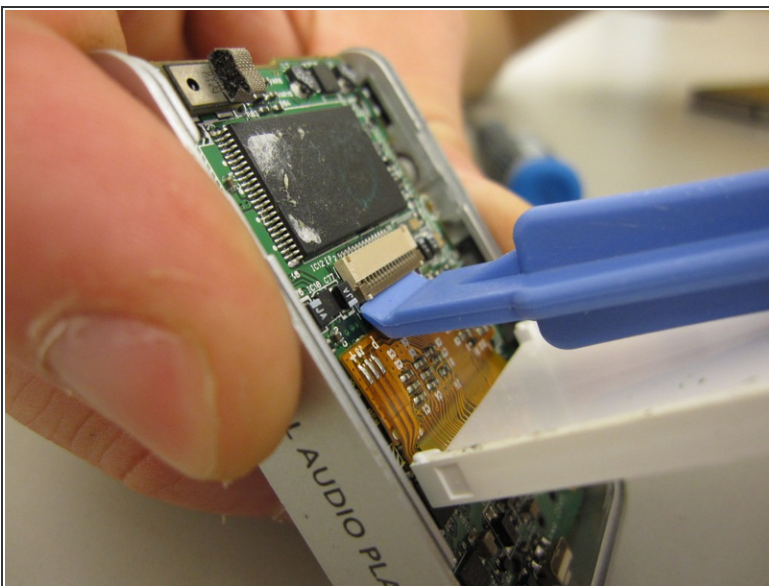

- Using a plastic pry tool to flip up the lip, which connects the electric ribbon to the mother board.




## Step 13

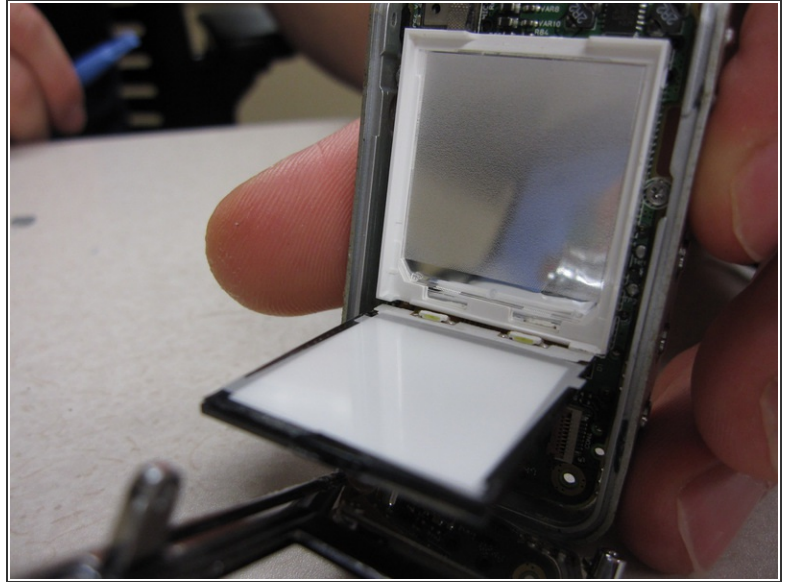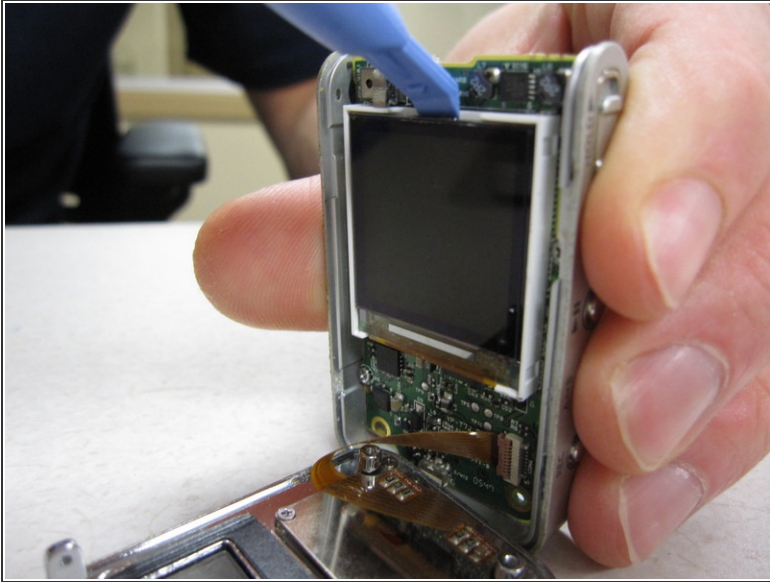

- Place the pry tool between the LCD screen and the white housing unit
- Gently separate the two.

## Step 14

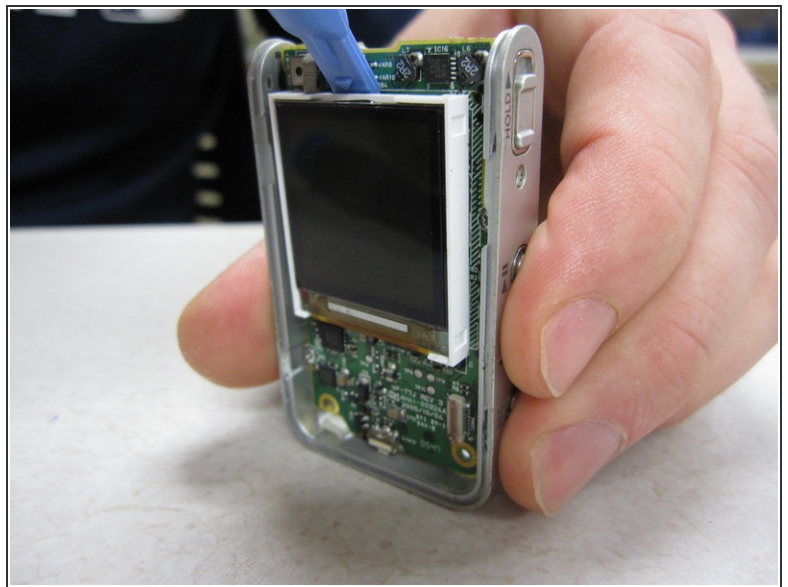

- Insert the new screen into the white unit.
- Connect the LCD screen to the mother board by inserting the electric ribbon into its port, and closing the lip.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 01:44:52 PM.